

6203
LADDER BAR ADAPTER BUSHINGS AND BOLTS

<u>ITEM</u>	<u>QTY</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>
1	4	1202	Pivot spacer ladder bar
2	2	3112	Bolt 5/8 - 18 x 2 1/2
3	2	3223	Locknut 5/8 - 18

This adapter set is used to attach the ladder bars to 3/4" hole front mounts.

1. The pivot spacers install into the front mount one on each side of the rod end. Do not force them in. If there is a burr on the front mount or spacer, carefully file it off. The step of the spacer and the sides of the rod end should be greased. Place the step on the spacers into the 3/4" holes of the front mount. One on each side of the front rod end of the ladder bars. Slide the bolt through the spacers and rod end. Then torque the bolt to 65 ft. lbs.

2. The ladder bar must pivot freely even when the front bolt is torqued. If it does not, eliminate whatever is causing the bind.

Revision Date: May 23, 2006



6203
LADDER BAR ADAPTER BUSHINGS AND BOLTS

<u>ITEM</u>	<u>QTY</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>
1	4	1202	Pivot spacer ladder bar
2	2	3112	Bolt 5/8 - 18 x 2 1/2
3	2	3223	Locknut 5/8 - 18

This adapter set is used to attach the ladder bars to 3/4" hole front mounts.

1. The pivot spacers install into the front mount one on each side of the rod end. Do not force them in. If there is a burr on the front mount or spacer, carefully file it off. The step of the spacer and the sides of the rod end should be greased. Place the step on the spacers into the 3/4" holes of the front mount. One on each side of the front rod end of the ladder bars. Slide the bolt through the spacers and rod end. Then torque the bolt to 65 ft. lbs.

2. The ladder bar must pivot freely even when the front bolt is torqued. If it does not, eliminate whatever is causing the bind.

Revision Date: May 23, 2006

