

READ ALL INSTRUCTIONS COMPLETELY AND THOROUGHLY UNDERSTAND THEM BEFORE DOING ANYTHING.
CALL CHASSISWORKS TECH SUPPORT (916) 388-0288 IF YOU NEED ASSISTANCE.

INSTALLATION GUIDE



300-0165

g-Bar/g-Link OEM Crossmember Reinforcement Caps (Retrofit kit for rear suspensions purchased prior to May 1, 2012)



Description: Sheet metal caps for OEM crossmember structure in '67-69 Camaro/Firebird. Welds above g-Bar upper control arm bracket to tie frame bracket to factory sheetmetal.

Applications: 1967-69 Camaro/Firebird g-Bar and g-Link suspensions purchased prior to May 1, 2012.

Note: The g-Bar frame bracket will already be installed. Reinforcement caps may require trimming to properly seat. Follow welding instructions as described on page two.

WARRANTY NOTICE:

There are NO WARRANTIES, either expressed or implied. Neither the seller nor manufacturer will be liable for any loss, damage or injury, direct or indirect, arising from the use or inability to determine the appropriate use of any products. Before any attempt at installation, all drawings and/or instruction sheets should be completely reviewed to determine the suitability of the product for its intended use. In this connection, the user assumes all responsibility and risk. We reserve the right to change specification without notice. Further, Chris Alston's Chassisworks, Inc., makes **NO GUARANTEE** in reference to any specific class legality of any component. **ALL PRODUCTS ARE INTENDED FOR RACING AND OFF-ROAD USE AND MAY NOT BE LEGALLY USED ON THE HIGHWAY.** The products offered for sale are true race-car components and, in all cases, require some fabrication skill. **NO PRODUCT OR SERVICE IS DESIGNED OR INTENDED TO PREVENT INJURY OR DEATH.**

Chris Alston's Chassisworks
8661 Younger Creek Drive
Sacramento, CA 95828
Phone: 916-388-0288
Technical Support: sales@cachassisworks.com



PARTS LIST



300-0165 - g-Bar/g-Link OEM Crossmember Reinforcement Caps

Qty	Part Number	Description
1	7959-0111	g-Bar OEM crossmember cap, driver side
1	7959-0112	g-Bar OEM crossmember cap, passenger side

INSTRUCTIONS

The photos are to illustrate the correct positioning of the components and to highlight the required weld areas.

1. Weld completely around the sheetmetal reinforcement cap and weld all rosette holes. The extended tab may require trimming to lay flat against the underbody.
2. The area around the tab must be filled to connect all three layers.
3. Grind the welds flush to allow the frame bracket to seat tightly against the bottom of the frame rail.

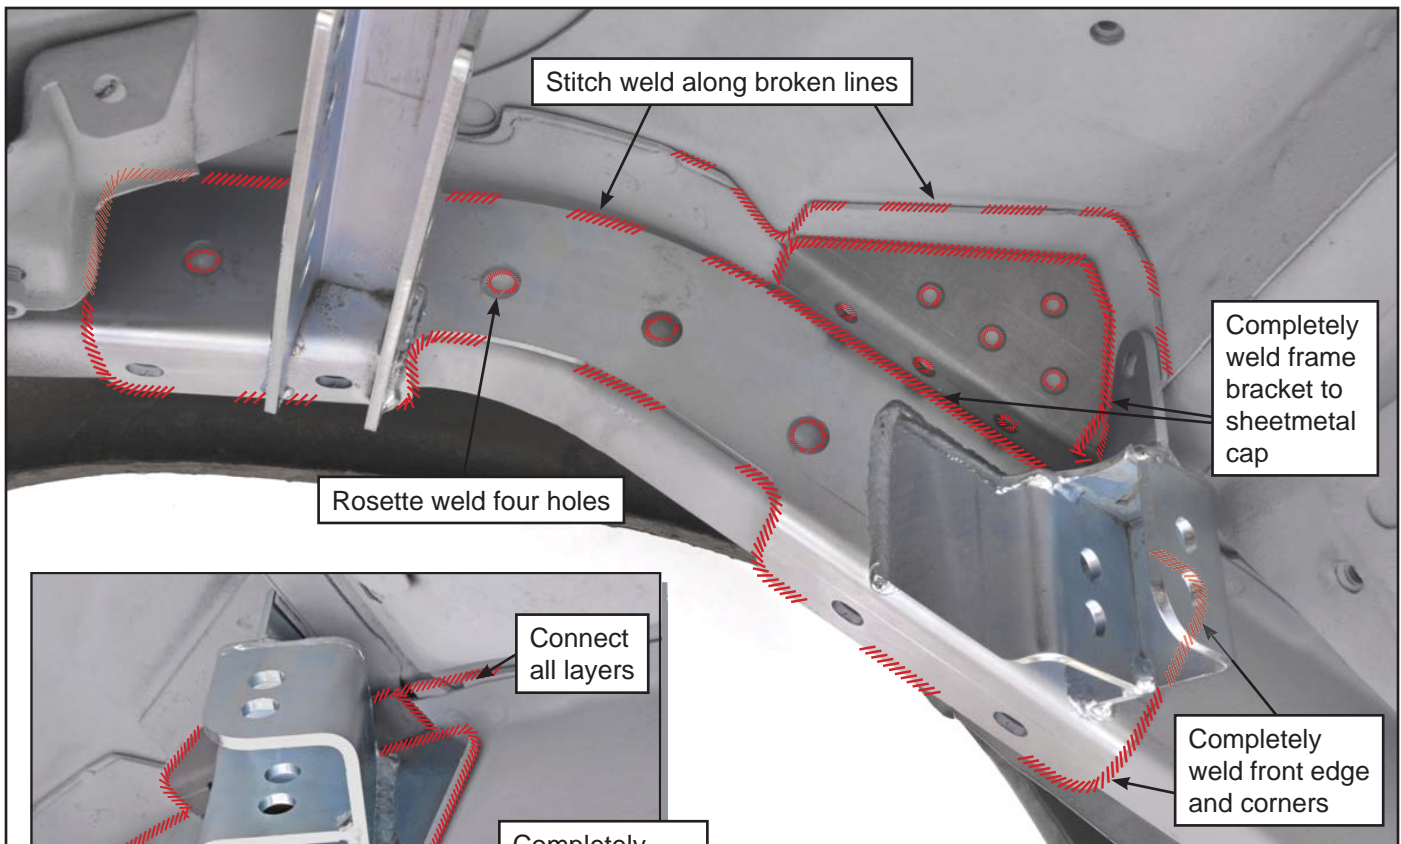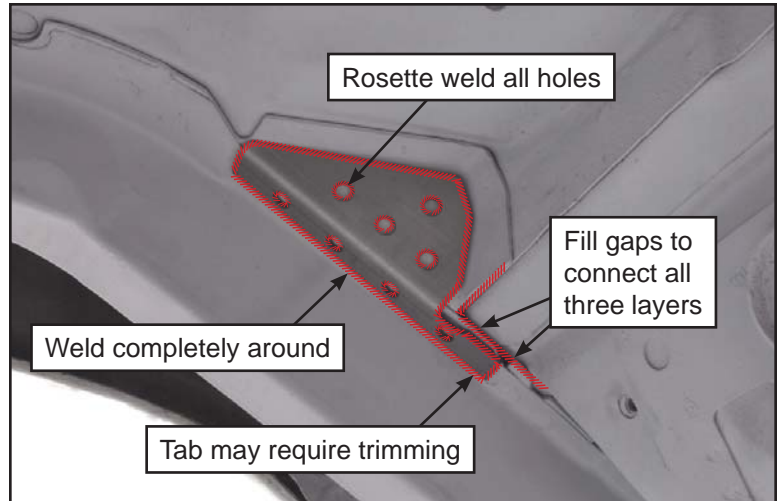

4. The g-Bar frame bracket is bolted into position (hardware not shown) over the reinforcement cap. If necessary, grind the bracket edge to ensure it seats tightly against the frame rail.